

ASV RC30
Front & Rear Idler Wheels
Intermediate Bogie Wheels

Bearing Installation for use on Bair Product's #BW230 Wheel.

Bearings can be purchased at a local ASV/Terex Dealer.

****When installing Bair Product's #BW230 Wheel, you will need to order seals and dust covers that fit the RC50/60 Machine.**

INTERMEDIATE BOGIE WHEELS - Bearing ASV Part #0302-591

A sealed, round, ball bearing is used on the Intermediate Bogie Wheels.

1. To install bearings, remove the plastic seals from the sides of the bearings. This allows the grease to flow through them.
2. Insert one bearing into the wheel, then *place the spacer into the center of the wheel followed by the remaining bearing. Failure to use the spacer will result in damaged bearings.*
3. Install rear seal and snap ring. Put the wheel on the axle and tighten the nut. Install the dust cover and outer snap ring. Grease the wheel.

FRONT AND REAR IDLER WHEELS - Bearing ASV Part #2010-062

Bair Product's recommends using this bearing which is a stronger roller bearing for these wheels.

1. Remove the dust seals from the sides of the bearings.
2. Insert one bearing into the wheel, then *place the spacer into the center of the wheel followed by the remaining bearing. Failure to use the spacer will result in damaged bearings.*
3. Install rear seal and snap ring. Put the wheel on the axle and tighten the nut. Install the dust cover and outer snap ring. Grease the wheel.

FRONT & REAR AXLE UPGRADE KIT:

This kit uses a tapered bearing which is better, heavier, bigger and a cone type cup.

It is an Inch wider overall to handle more undercarriage support.

Each kit come complete with two wheels, one axle, snap rings, washers, caps, seals, retainer nut, bearings, races whole saw and arbor.